

 
## Assembly and Maintenance Tips




1. Keep children and pets away from the working area as small parts may cause choking if swallowed.



2. Some furniture may require two persons to assemble for safety reasons.



 3. To protect the surfaces of the furniture, lay the parts and perform the assembly on top of a soft mat (such as a carpet or cardboard).



4. Keep the furniture away from direct sunlight to avoid fading.



5. Use a soft, damp cloth to clean or wipe surfaces.




6. Never use ammonia-based or abrasive cleaning products to clean as they may damage the finish.




7. Do not place liquids or wet items on furniture as they may leave water marks/stains. Always use a coaster or runner to protect the furniture surface.


# Assembly Checklist

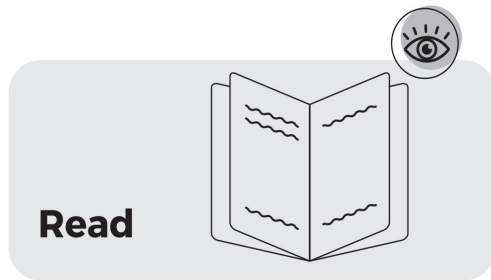 

 
Read through the instructions carefully  
before you begin.

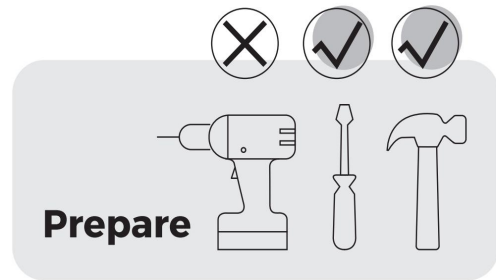

 Make sure you have all the required tools.  
Never use power tools unless instructed.

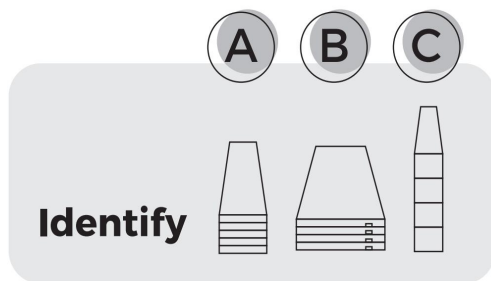

 
Identify and lay out all of the components  
before you begin assembly.

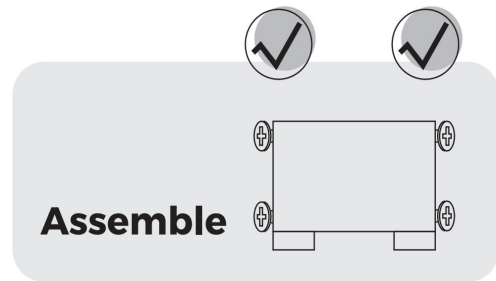


Please fully tighten all screws during the  
assembly process unless instructed not to do so.


## Helpful Information

  - ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
  - ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
  - ! When assembling the product, it is recommended to do so on top of a soft surface such as a carpet or cardboard to avoid scratches and damages to the furniture surfaces.
  - ! Bulky items such as wardrobes should be assembled in the location when the assembled piece will be used to avoid moving them through doors or tight passages.
  - ! Never use any glue until you are certain that the parts belong together.
  - ! Periodically check that all connections are secured and follow all care and maintenance instructions stated.
  - ! If you encounter any assembly difficulties or missing components and/or hardware, please contact our Customer Service for further assistance.
-

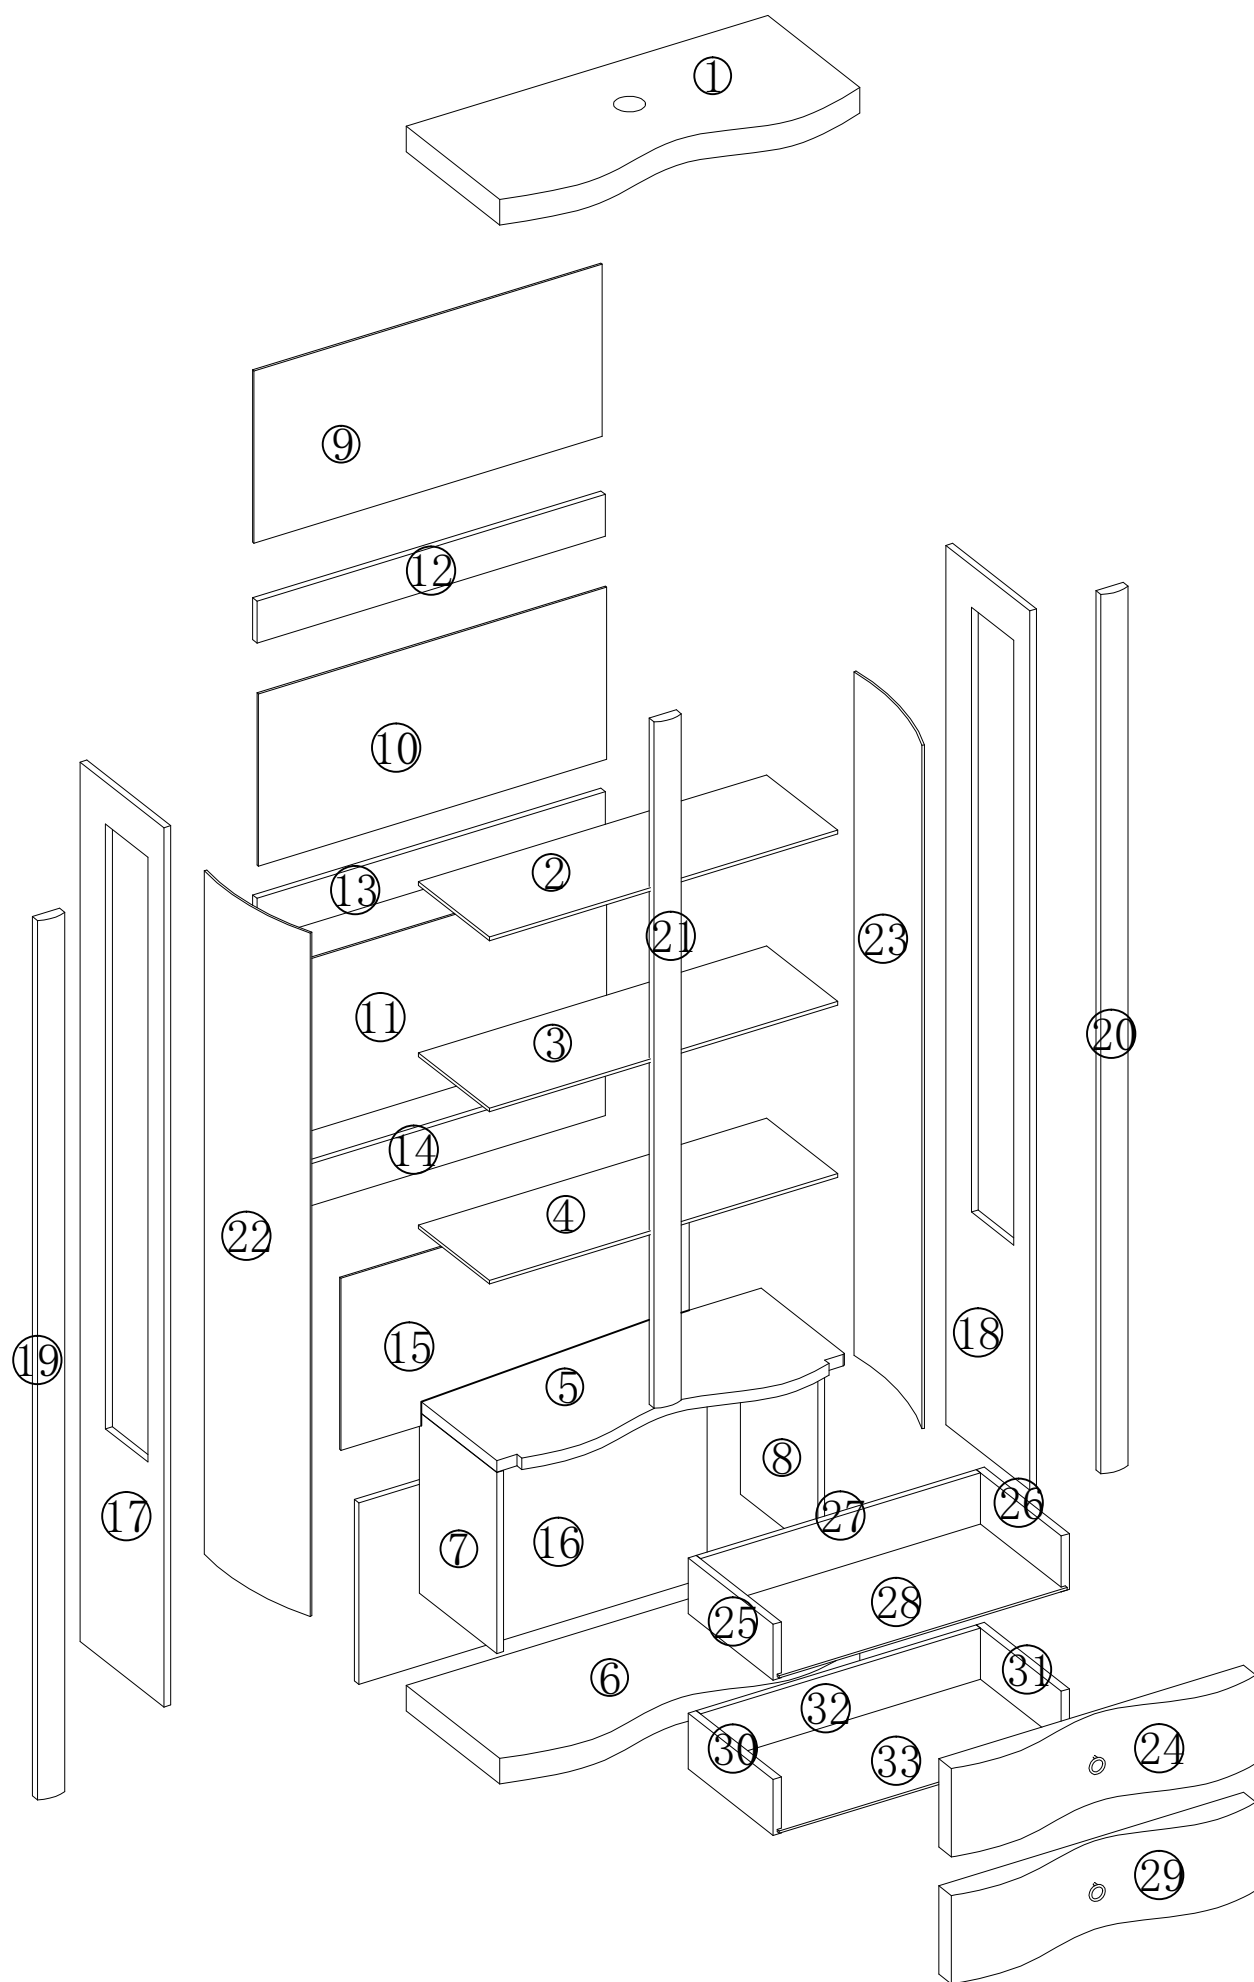


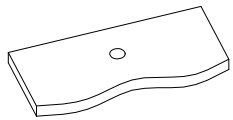


①

 

②

 

③

 

④



⑤



 
⑥




⑦




⑧

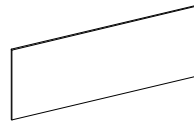

⑨

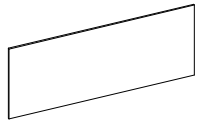 

⑩

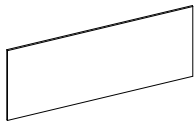 

⑪



 
⑫




⑬



⑭



⑮

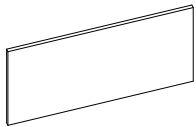 

⑯



⑰



 
⑱



⑲



⑳



㉑



㉒



㉓



㉔



㉕



㉖



㉗



㉘



㉙



 
㉚



31



32



33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53



A × 56



B × 56



C × 2



D × 2



 
E × 2



F × 12




H × 1

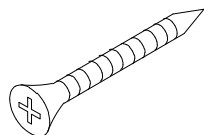

I × 8




 J × 24

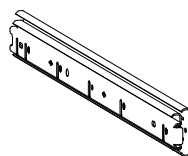

K × 4

 
1、



A×10




 B×10

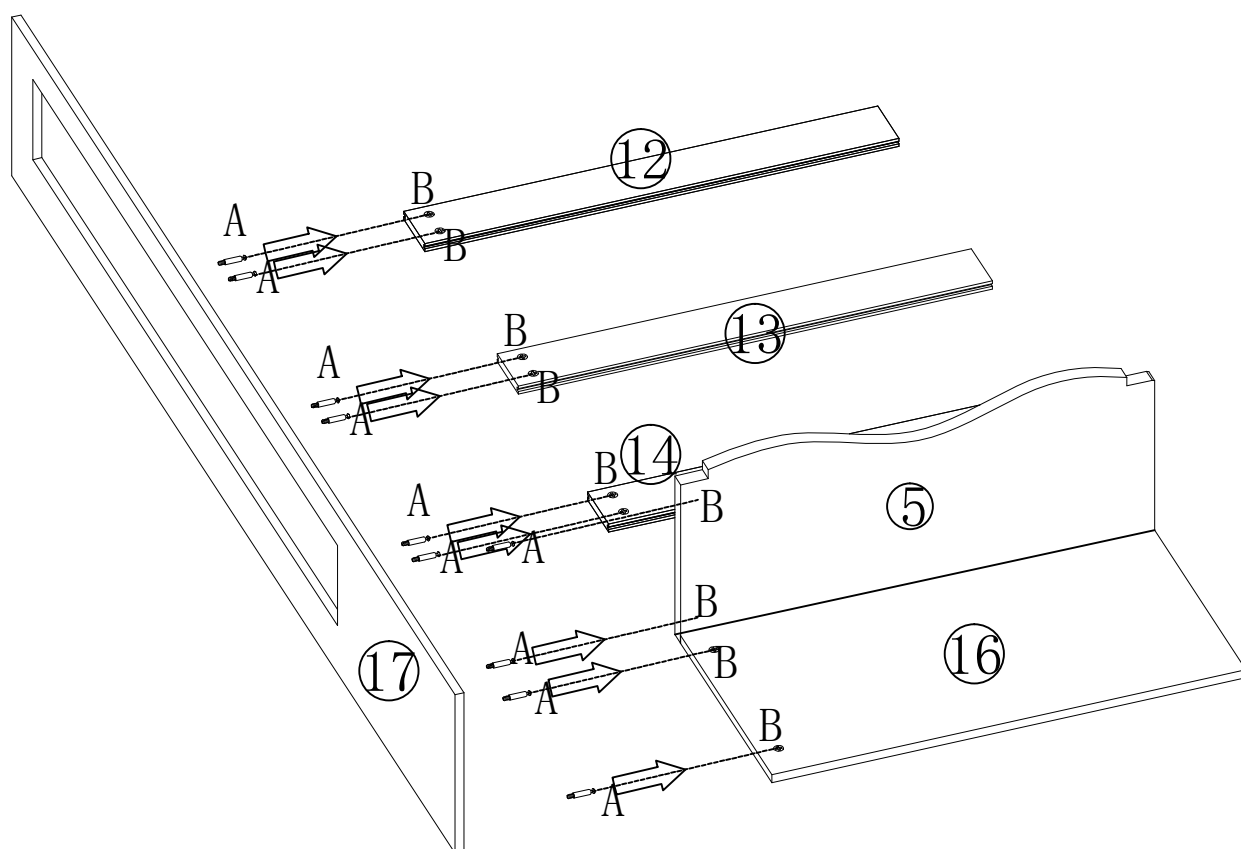




2、

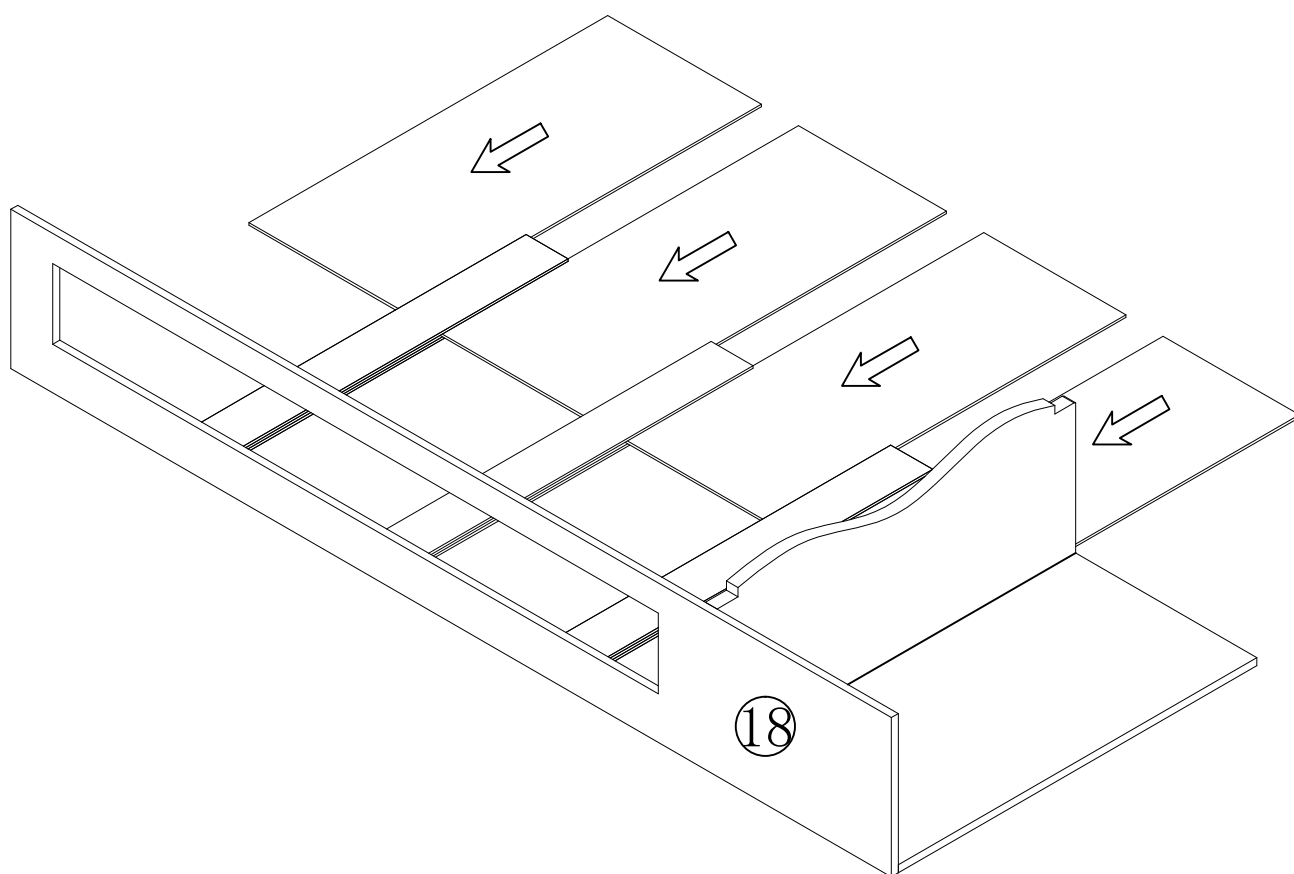 


3、

 

A×10

 
B×10

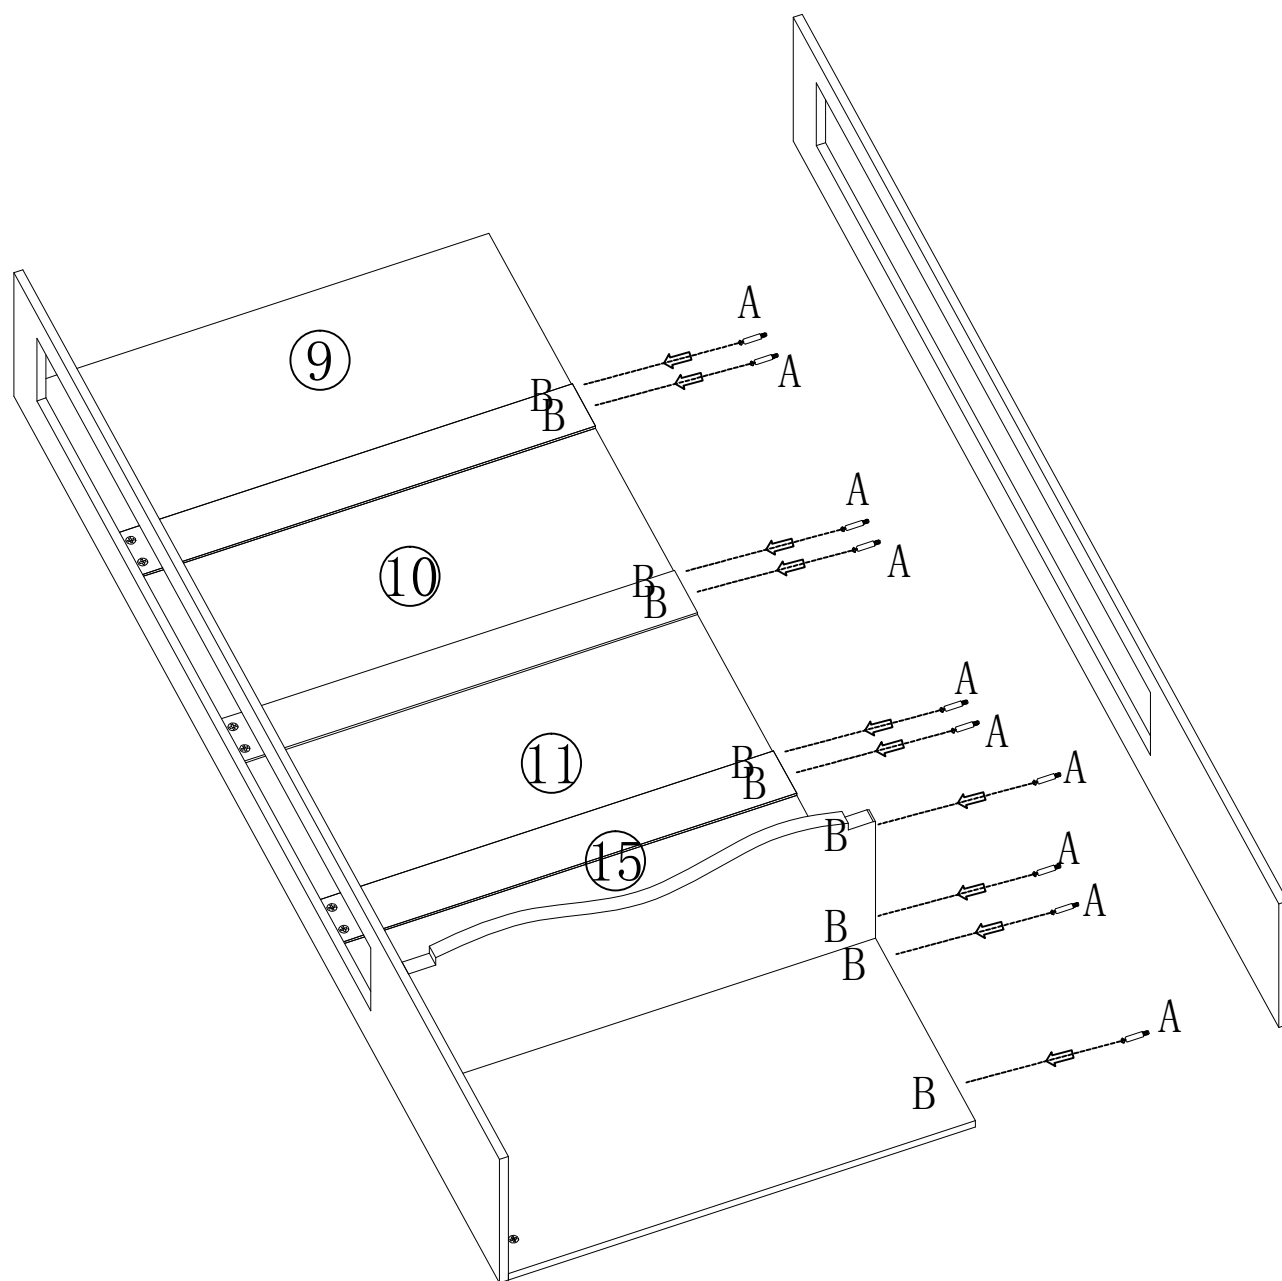


4、



 C×2

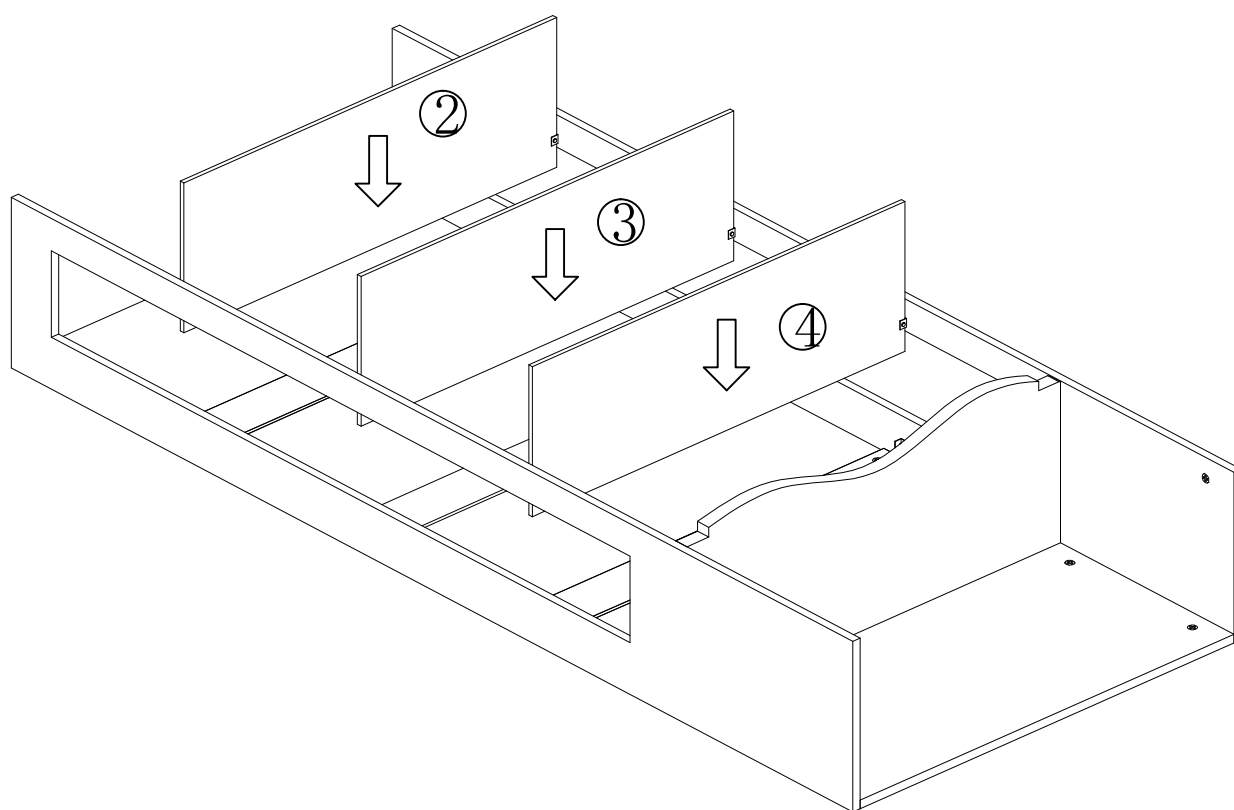


5、

 


A × 20



 B × 20

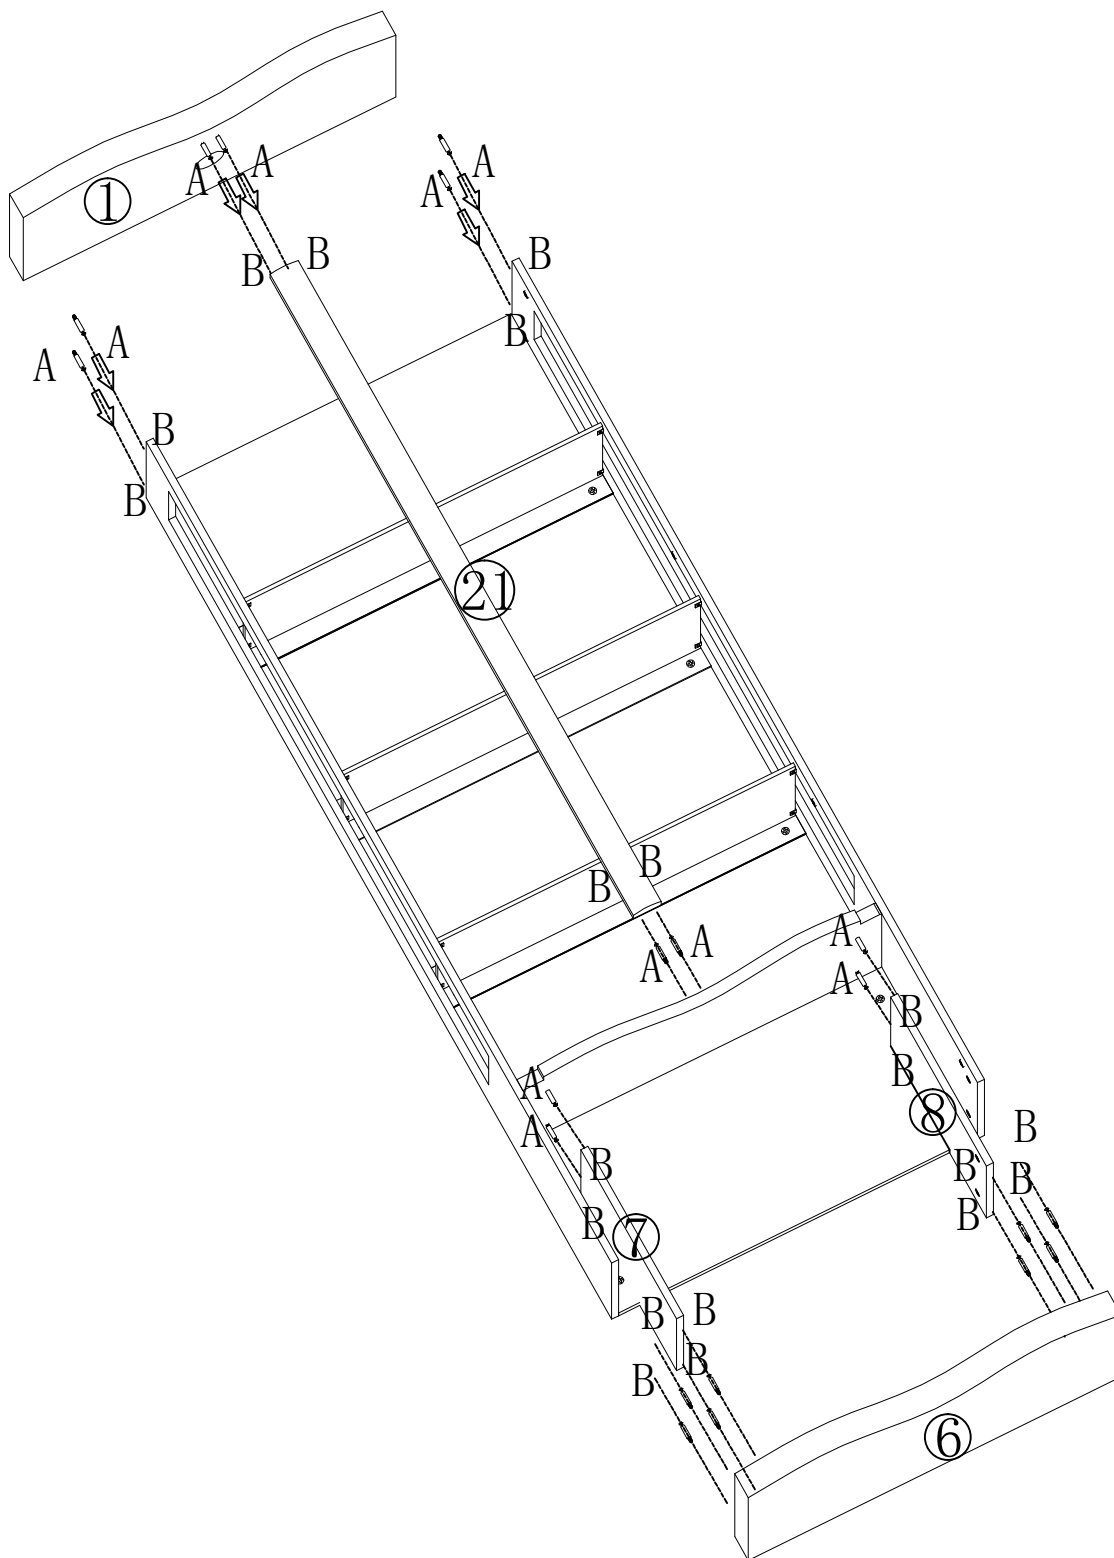


6、

 

A×8



 B×8

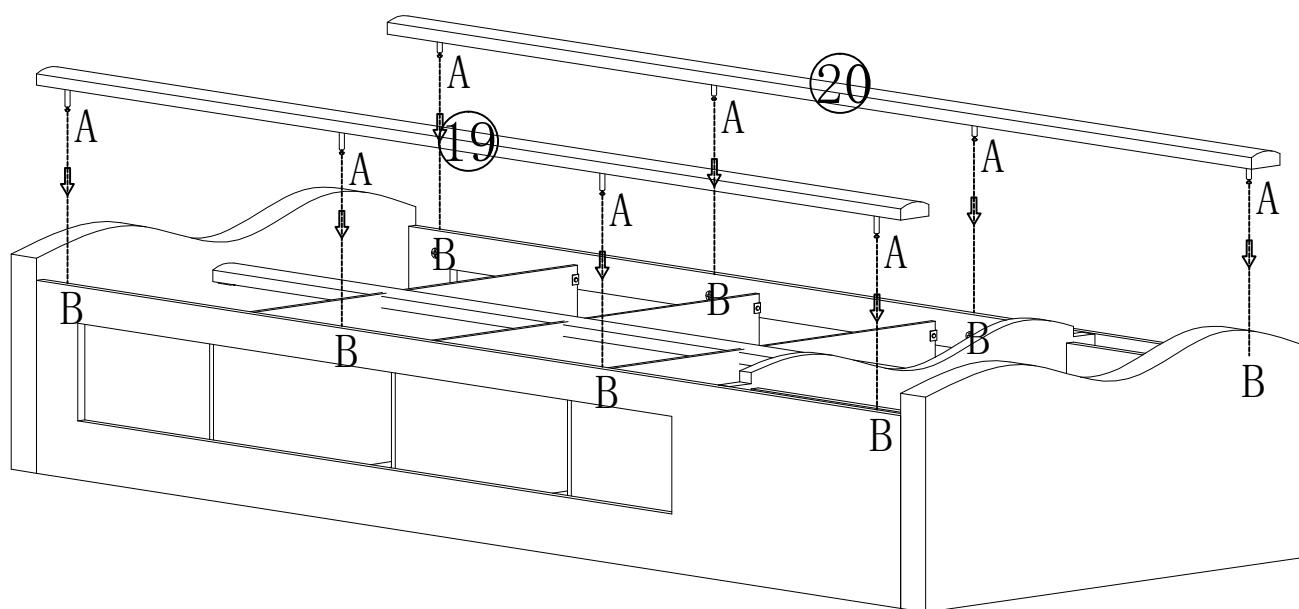

7、



C×2



 
D×2



8、



H×2

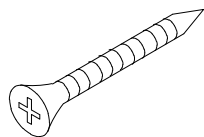

I×8



J×12



 
E×2





A×8



B×8

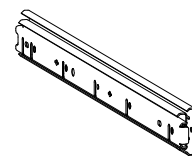


K×4

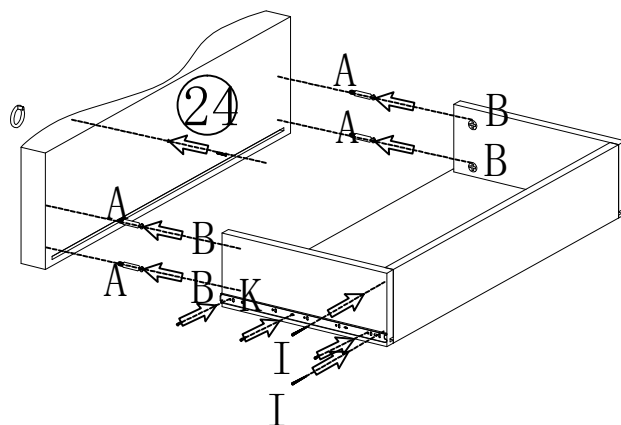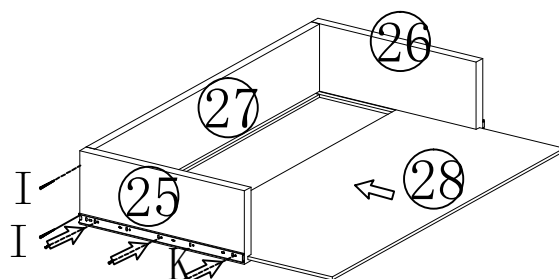  


×2

 9、

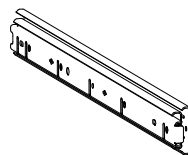

K×4

 J×12

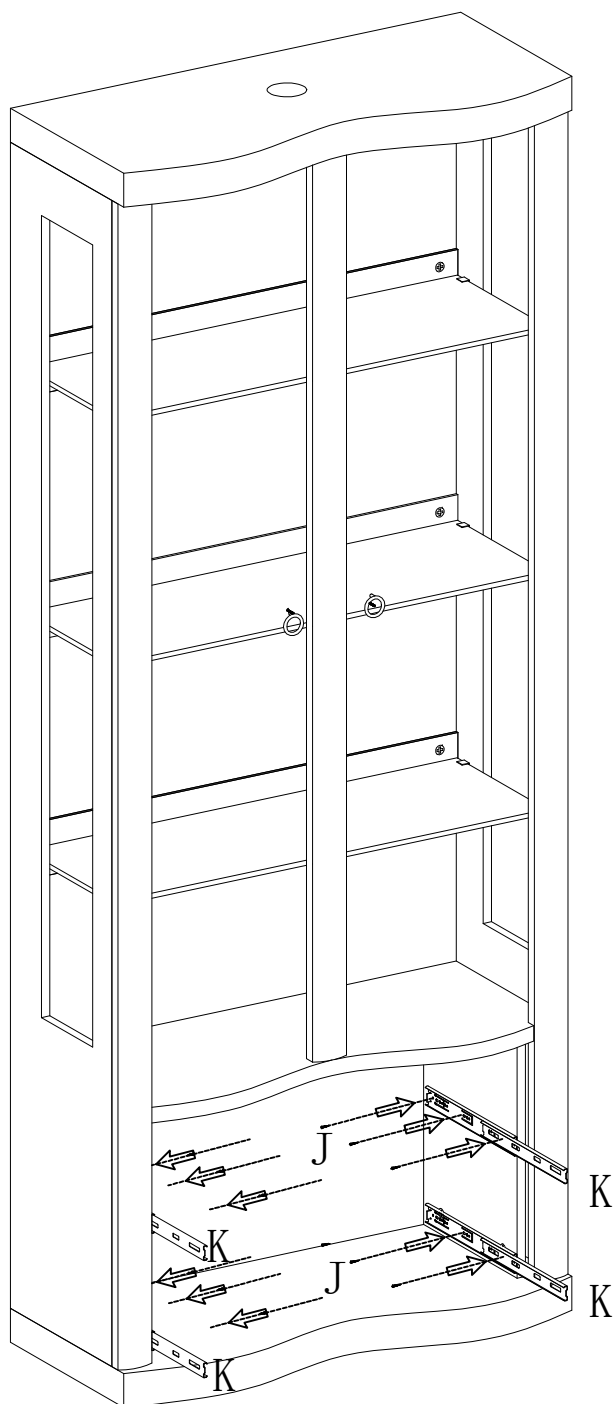



10、

